

# Pro'sKit®

MA-1209LA ( AC 110V-120V 60Hz )

MA-1209LI ( AC 220V-240V 50Hz )

LED Table Clamp Magnifier Lamp



# Pro'sKit®

寶工實業股份有限公司


PROKIT'S INDUSTRIES CO., LTD.

<http://www.prokits.com.tw>

E-mail : [pk@mail.prokits.com.tw](mailto:pk@mail.prokits.com.tw)



©2023 Prokit's Industries Co., LTD. All rights reserved 2023001(T)

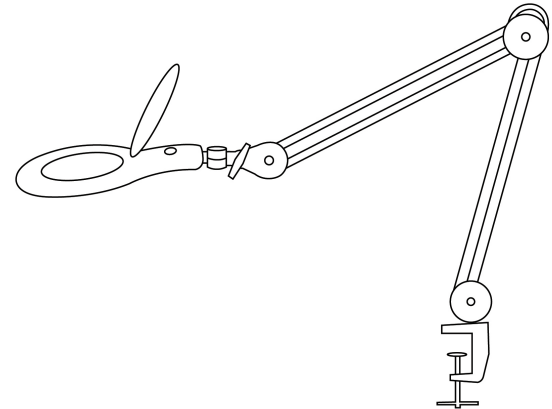

## User's Manual

1<sup>st</sup> Edition: 2023

©2023 Copy Right by Prokit's Industries Co., Ltd

## LED Table Clamp Magnifier Lamp

### LED Table Clamp Magnifier Lamp

#### Model No.: MA-1209LA/LI

Thank you very much for purchasing our LED Table Clamp Magnifier Lamp. The Magnifier Lamp is ideal for precise work in home, office and workshop as well as a lot of other important places. Before using the Magnifier Lamp, please read the following instructions carefully.

#### Features:

- Complies with CE safety standard
- The glass lens provides the high transmittance and not easy to scratch
- Light source by 90pcs white LED, low temperature and long life.
- Standard mount: Desktop clamp
- Power supplied with electronic rectifier provides even more stable performance
- The universal joint neck design allows the lens face to any side you prefer.
- Adjustable arm for easy positioning where it is most needed.

#### Specification:

- A. Magnifier:  $\varnothing$ 127mm diameter, 5 diopter
- B. Voltage: AC 110V-120V 60Hz / 220-240V 50Hz
- C. Light source: 90PCS white LED
- D. Supplied with electronic ballast

## LED Table Clamp Magnifier Lamp

#### How to use:

- A. Before use, remove all packing foam around the lamp.
- B. Put the lamp on the horizontal table.
- C. Insert the plug into a conveniently located electrical socket.
- D. Switch on using the ON/OFF switch located on the surface of the base.
- E. To place the head in the desired position.

#### Safety Caution:

- A. Indoor use only.
- B. Environment temperature:  $-20^{\circ}\text{C}\sim 40^{\circ}\text{C}$ .
- C. Humidity:  $\leq 95\%$ .
- D. Never disassemble the magnifier lamp unless you are a qualified electrician.
- E. Plug must be taken out while repairing the magnifier lamp.
- F. Never leave the lens unattended in direct sunlight or where light can shine through it. This constitutes a fire hazard.